


## Wichtige Informationen (bitte aufbewahren)!

Die **farbigen Markierungen** auf den Behängen sind fertigungsbedingt und verschwinden nach ein paar Stunden UV-Einstrahlung.

1. Ziehen Sie den Stoff im Bereich des Velourbandes vor dem Ankletten in Form, da es beim Nähen zu Faltenbildung in diesem Bereich kommen kann.





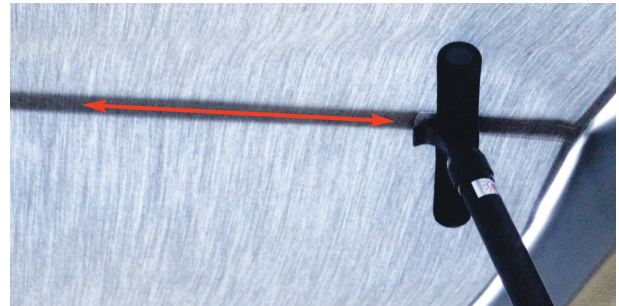


2. Beginnen Sie stets seitlich um die Behänge anzukletten (von rechts nach links oder umgekehrt)!



3. Drücken Sie nach dem Ankletten die Behänge entlang der Klettstreifen mit Hilfe des Bedienstabs noch einmal richtig nach!

### Pflegeempfehlung Behänge:

<p>Behang season</p> 	<p>Behang sunlike</p> 
<p>Behang sunout</p>  <p>nicht dampfbügeln</p>	<p>Behang dreamlike -DS</p> 
<p>fabric vuscreen</p> 	<p>Verschmutzungen können mit einem Wasserstrahl (kein Hochdruck) abgespült werden. Wenn erforderlich, Schwamm oder weiche Bürste mit geringer Menge Feinwaschmittel und max. 30°C warmes Wasser zur Reinigung verwenden, wobei starke Reibung zu vermeiden ist. Anschließend das Gewebe mehrfach mit Frischwasser nachspülen und trocknen lassen.</p>

### Nachimprägnierung:

Durch eine Reinigung, bzw. durch die Inhaltstoffe verschiedener Reinigungsmittel, kann eine Reduzierung der wasserabweisenden Eigenschaften eintreten, die nicht zu vermeiden ist. Daher empfehlen wir nach der Reinigung eine Nachimprägnierung, damit anschließend wieder ein ausreichender Wetterschutz hergestellt wird. Hierzu können gängige Nachimprägnierungsmittel für Zelt- oder Markisenstoffe verwendet werden.

**Hinweis bei Demontage der Klettprofile** (System HAND - Statik innenliegend):  
Zuerst die Seite mit dem feststehenden Gleiter lösen, anschließend die Seite mit dem beweglichen Gleiter.




## Important information (please keep)!

The **colored marks** on the fabric are production related and will disappear after a few hours of UV exposure.

1. Pull the fabric in the area of the velour tape in shape before fastening, because sewing may cause wrinkles in the area of the velour tape.



2. Always start from the side to attach the fabrics. (from right to left or the other way around)!

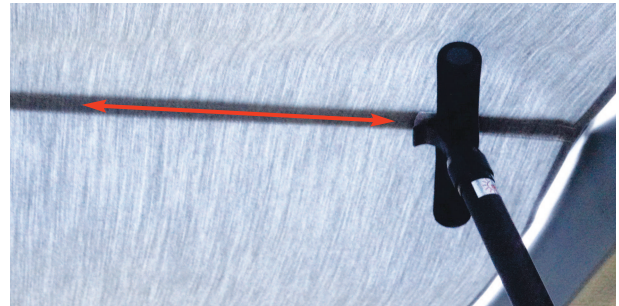

3. After attaching the fabric, press it along all velcro® strips once again with help of the operating rod!

### Fabric care recommendation:

<p>fabric season</p>	<p>fabric sunlike</p>
<p>fabric sunout</p> <p>do not steam iron</p>	<p>fabric dreamlike -DS</p>
<p>fabric vuscreen</p>	<p>Dirt can be rinsed off using a jet of water (no high pressure). If needed sponge down or soft brush with a small amount of mild detergent using max. 30°C (86°F) warm water to clean. Strong friction should be avoided. Then repeatedly rinse the fabric with clean water and allow to dry.</p>

### Reimpregnation:

Cause of cleaning, or the ingredients of various cleaning products, a reduction of the water-repellent properties is possible. This cannot be avoided. We recommend reimpregnation after cleaning so that adequate weather protection is subsequently reestablished. Common impregnation products for tent or awning fabrics can be used.

**Note when disassembling the velcro® profiles** (system HAND - internal static):  
First loose the side with the fixed glider, then the side with the movable glider.

